




Simple Pre-Set Velocity

The SIMPLE PRE-SET VELOCITY device will set all incoming MIDI notes to a certain velocity.

INPUT MONITOR
All MIDI notes ON
velocity will be
shown here.

OUTPUT VELOCITY
Set the output velocity
here. All incoming
notes velocity will be
converted to this
velocity.

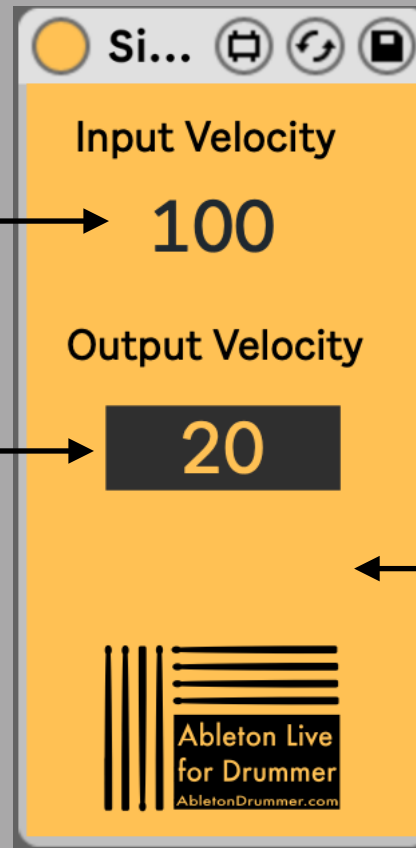

YELLOW FLASH
If a MIDI note is being
received/output the hole
device will flash up yellow.

[This device is included in the Velocity Devices Pack - Check it out here!](#)

